

QUICK START GUIDE

SNMP Card Armac – SNMP/A/001

1. Package Contents:

Item	Quantity
SNMP Card	1
Antistatic bag	1
Individual box	1


2. Default Settings

Parameter	Value
IP Address	192.168.1.250
Username	admin
Password	admin

3. Installation

⚠ The SNMP card supports hot-swap – you do not need to power off the UPS when installing the card.

⚠ Do NOT insert an Ethernet cable into the RS485 port – this may permanently damage the device.

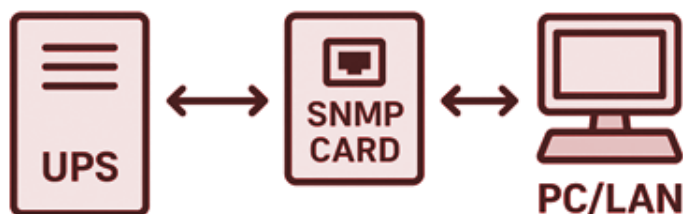

4. First Login

1. Connect PC to the same subnet (e.g. 192.168.1.100).
2. Open browser → type 192.168.1.250.
3. Login: admin / admin.

5. Next Steps

4. Set the correct Rated Output Power (W) in *Parameter Settings* → *System Settings* → *Rate Output Power (W)*.

⚠ This value is essential for correct calculation and display of other UPS parameters and information.

5. Change IP, subnet, and gateway in Network Settings (as preferred).
6. Set the administrator password.
7. Configure email and SNMP settings if required.

i Tip: Indicator status at startup:

- **P** (*Power*) = ON

- **S** (*Network*) = Flashing

- **E** (*UPS Comm.*) = ON